

JYMPA



RHJ-3000 Stone tedder

 
User and maintenance manual

 
 
 
 
 
 
Since **1971** Working
the Earth 

Translation of the Spanish original instructions **ENG**

7. Spare parts list

0201	UCF-210 bearing (Japanese norm)	0218	20B.1 1"1/4 chain
0202	UCF-209 bearing (Japanese norm)	0219	20 B.1 angled union link
0203	UCF-211 bearing (Japanese norm)	0220	20 B.1 straight union link
0204	14x35 8.8 933 bolt	0221	Drive shaft
0205	Locking washer	0222	2061 gearbox
0206	Z-28 1"1/4 gear	0223	Shaft cones
0207	Tightening cone	0224	Spike
0208	14x9 cotter pin	0225	Spike bolt
0209	M-14 nut with 14 mm flat washer	0226	24P torque limiter
0210	3202.2RS bearing	0227	Third point bolt
0211	Z-8 1"1/4 gear	0228	Wheel
0212	Tensor	0229	SZ 30.25 half shaft
0213	14x35 8.8 933 bolt	0230	Wheel depth control bolt
0214	Locking washer	0231	Coupling bolt
0215	Z-11 1"1/4 gear	0232	Safety pin
0216	Tightening cone	0233	Safety chains regulator bolt
0217	14x9 cotter pin	0234	Supporting stand bolt

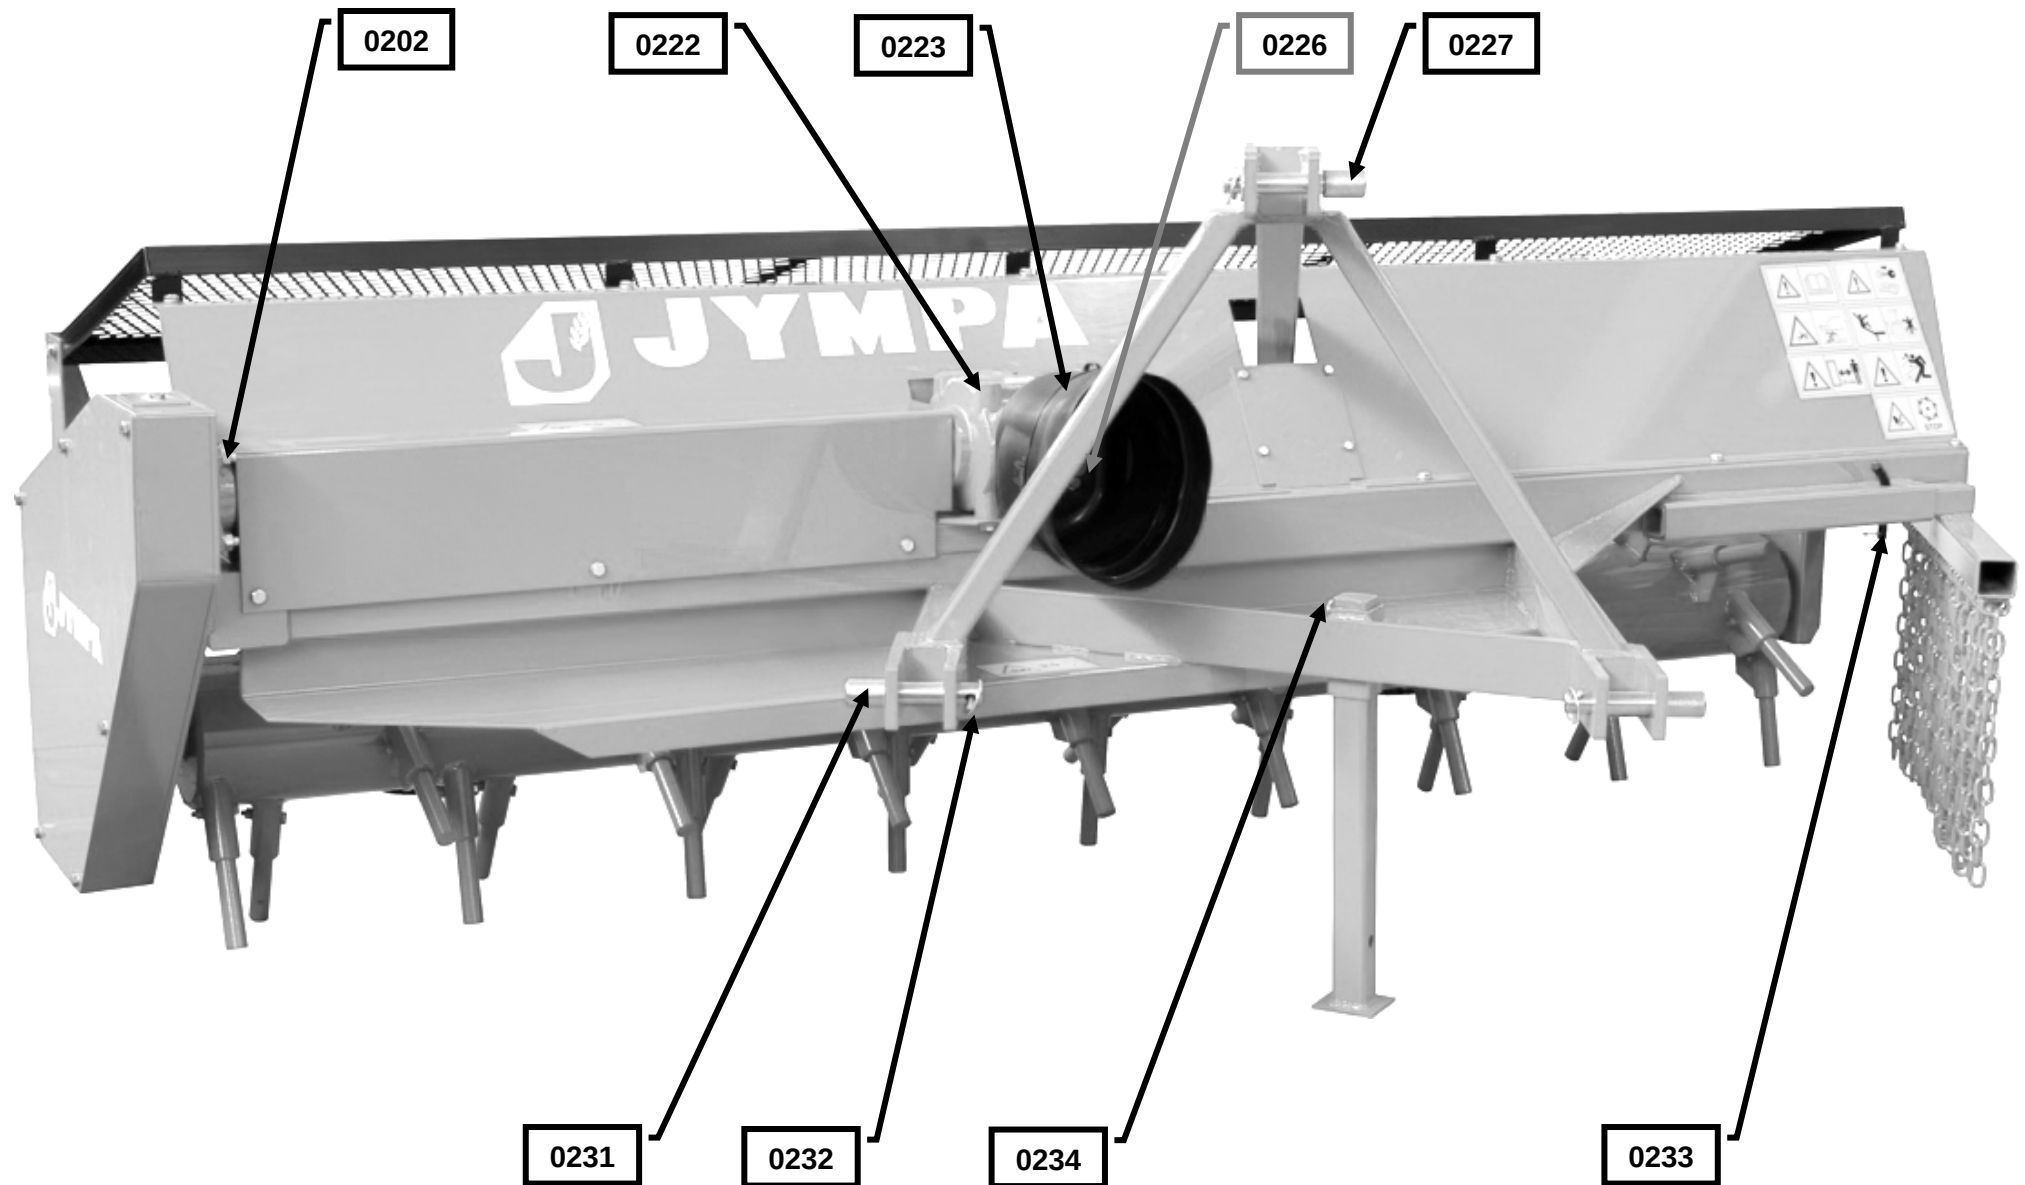

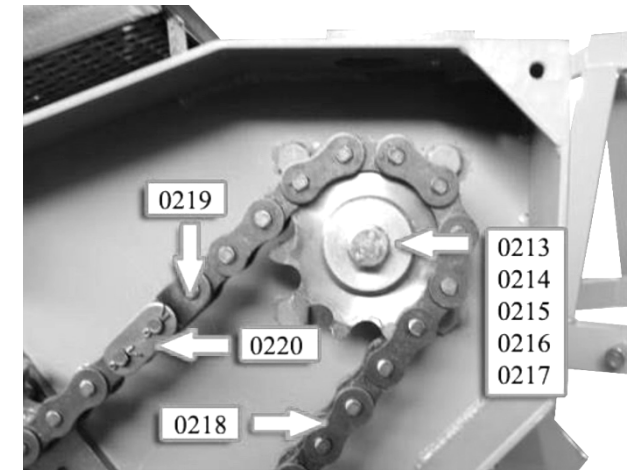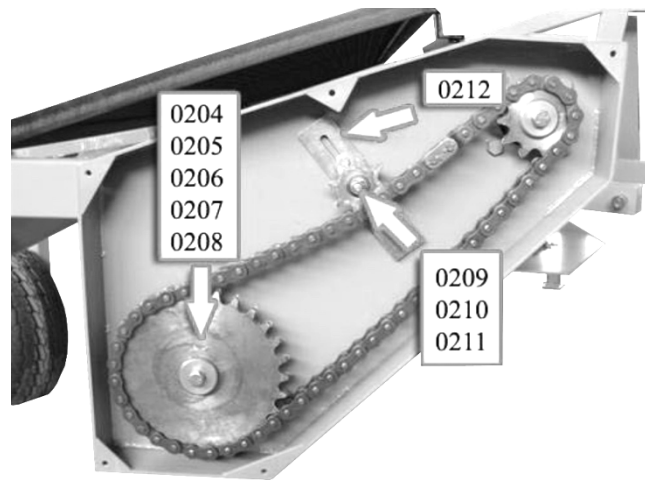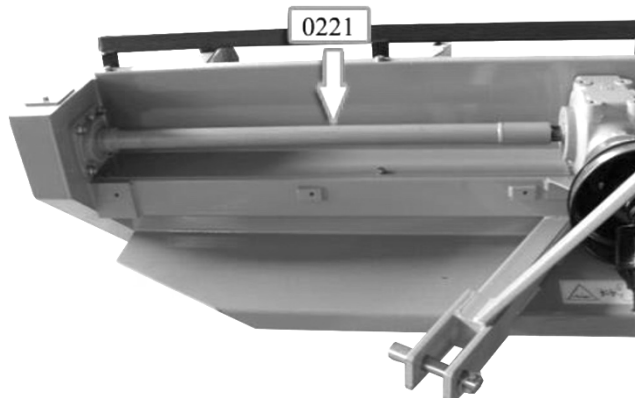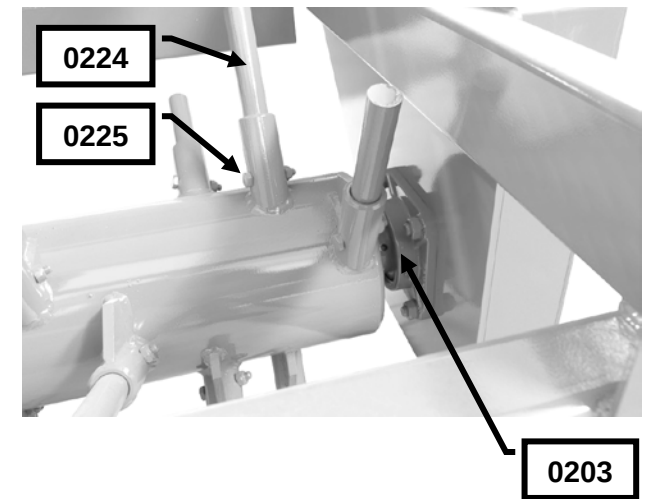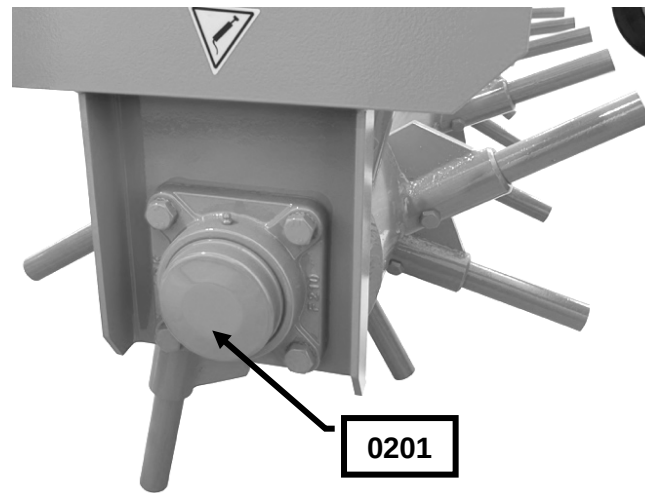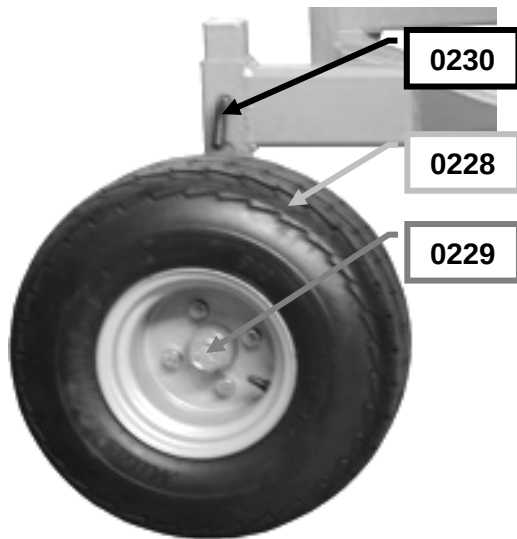

JYMPA

Carretera LV-3028 km 1,4
25334 Castellserà, Lleida (Spain)
Tel. +34 973 610 125 | Fax. +34 973 610 56
www.jympla.com | jympla@jympla.com

